

# JISKOOT CoJetix Sampling System

TECHNOLOGY



# JISKOOT CoJetix Sampling System


Cameron's JISKOOT™ CoJetix® system is the highest accuracy liquid hydrocarbon sampling system available. It has the lowest measurement uncertainty (-0.025%)<sup>1</sup> and delivers the best return on investment for high value transactions.

A CoJetix is the system of choice for custody-transfer, allocation and quality measurement where mixing is required.<sup>2</sup>

The CoJetix system is a combined fast-loop sampling and JetMix® system. The sampling system is integrated as part of the JetMix loop which provides optimal pipeline mixing without inducing a pressure drop in the main process. It is suitable for applications with a wide turndown of flow rates or where a pressure drop could cause a bottleneck in the process.

Liquid hydrocarbon sampling
0.025% measurement uncertainty <sup>1</sup>
ISO, EI (IP), API and ASTM compliant
Provable to standards by water injection
Low inter-batch sample contamination risk
Operator friendly and simple to maintain
Low installation cost

Typical Systems Schematic

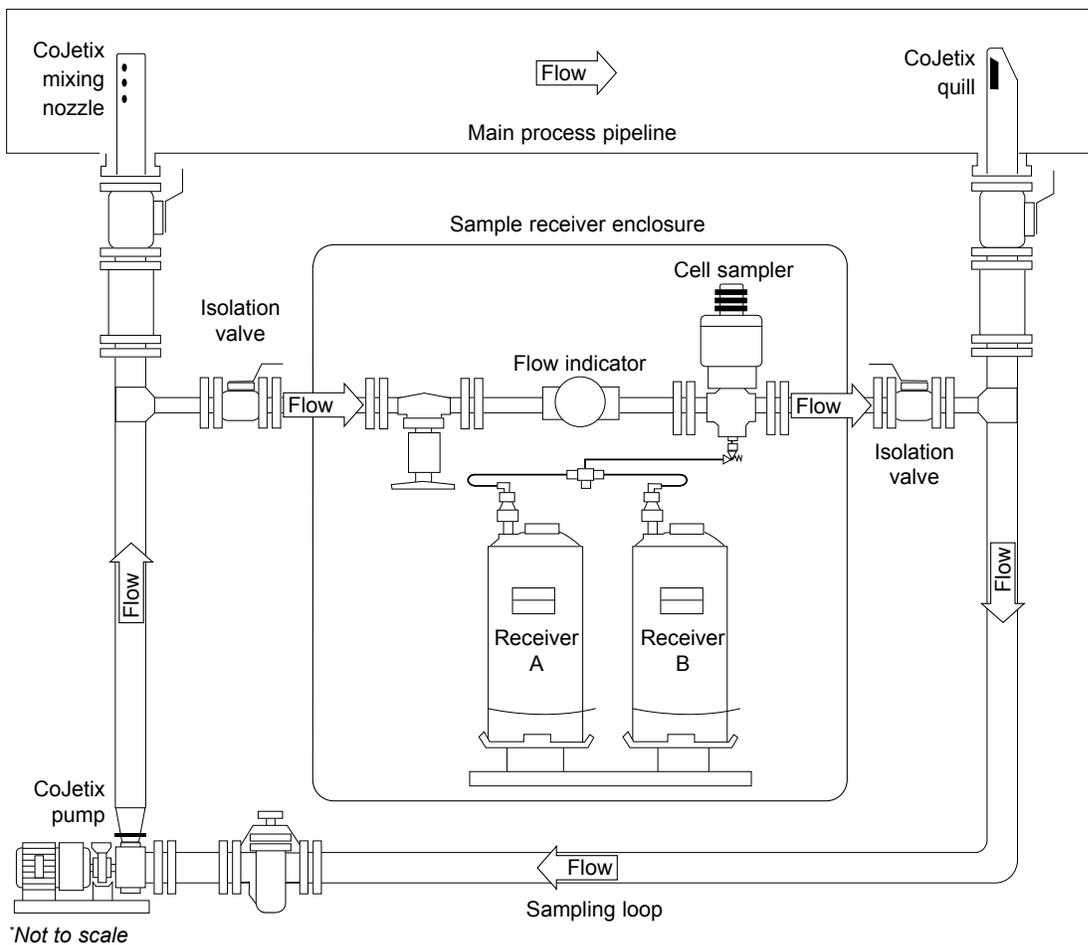

<sup>1</sup>Based on data from over 200 water injection proving tests

<sup>2</sup>An online assessment of pipeline mixing can be performed at [www.c-a-m/jiskoot](http://www.c-a-m/jiskoot)

## Applications

- Crude oil
- Condensate
- Low temperature liquid hydrocarbons
- Refined products
- Hazardous liquids

Mixing energy is added to the flow by jets in the nozzle, ensuring the mixing is suitable for sampling at all flow rates.

Flow is extracted into a sampling loop through a large take-off quill inserted into the center of the main pipeline. The quill has a large inlet, which further reduces the sampling systems uncertainty.

The sampling loop is designed to have no water traps and sufficient fluid velocity to maintain sample representativity and homogeneity through the system. The loop passes through a sample receiver enclosure which can be located in a convenient position for the operator. The enclosure can be fully isolated so that any maintenance work can be carried out with no impact on the main process.

The enclosure contains a flow-through cell sampler which discharges 1cc samples directly into a sample receiver. The short distance travelled by the sample minimizes the risk of cross-contamination between batches.

The enclosure, which can be heated to maintain an even temperature to avoid solid or wax formation, also houses the sample receivers. These can be fixed volume (PR-103, PR-53, PR-23) or constant pressure sample receivers (Constant Pressure Cylinder) with manual or automatic changeover.



Fixed nozzle and quill take-off

Dynamic performance measurement can be achieved by fitting a CanWeigh system for PR receivers or a level-sensor system for Constant Pressure Cylinder receivers. A sampler controller can be installed providing configuration, monitoring and control functions with DCS integration capability.

System components are selected for maximum reliability. Crucial items are mounted outside the main pipeline allowing the system to be easily isolated for maintenance without access to the main line.

The withdrawable nozzle and quill can be installed by hot-tap into either the top or the bottom of the pipeline. Online analyzers such as water-in-oil monitors and densitometers can be integrated as part of the sampling loop ensuring optimum representativity, accuracy and direct comparison of results.

**NORTH AND SOUTH AMERICA**

14450 JFK Blvd.  
Houston, TX 77032  
USA  
Tel 1 281 582 9500  
ms-us@c-a-m.com

**EUROPE, AFRICA, CASPIAN AND RUSSIA**

JISKOOT Technology Centre  
Longfield Road  
Tunbridge Wells  
Kent, TN2 3EY  
United Kingdom  
Tel 44 1892 518000  
ms-jiskootuksales@c-a-m.com

**ASIA PACIFIC**

Suite 16.02 Menara AmFirst  
No. 1 Jalan 19/3  
46300 Petaling Jaya  
Selangor Darul Ehsan  
Malaysia  
Tel 603 7954 0145  
ms-kl@c-a-m.com

**MIDDLE EAST**

Level 9, Al Jazira Club Tower A  
P.O. Box 47280, Muroor Road  
Abu Dhabi  
United Arab Emirates  
Tel 971 2 596 8400  
ms-uk@c-a-m.com

Learn more about measurement at:  
[www.c-a-m.com/measurement](http://www.c-a-m.com/measurement)



**ALGERIA • CANADA • CHINA • INDIA • MALAYSIA • RUSSIA • UAE • UK • USA**

**HSE Policy Statement**

At Cameron, we are committed ethically, financially and personally to a working environment where no one gets hurt and nothing gets harmed.